

Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE

LAUNDRY - DISHWASHING - COOKING - COOLING

Installation and Operating Instructions



Under Counter Retro Fridge Freezer

MAB2035 - 48cm Wide

Red/Black/Cream/Pure Blue/White

Please read these instructions carefully before attempting to install or use this appliance.
We recommend that you keep these instructions in a safe place for future reference.

Welcome

Thank you for choosing this Montpellier appliance.

Our appliances have been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your appliance to ensure you get the most from your purchase.

We recommend that you keep this manual in a safe place for future reference.

Your appliance is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your appliance, you can rest assured that you are fully protected against the cost of repairs for the first 24 months. Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found inside your appliance.

NB: Please make sure that you keep a copy of your original sales invoice as this will be needed if any service call is required.

There are three ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. www.montpellier-appliances.com
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.
- **By Phone:** Contact our warranty registration department on **0808 1961388**

2
YEAR
GUARANTEE
— PARTS & LABOUR —
ACROSS ALL OUR MODELS
Montpellier
www.montpellier-appliances.com

TABLE OF CONTENTS

REFRIGERATOR SAFETY IMPORTANT	3
GUIDELINES	4
PARTS AND FEATURES IMPORTANT	5
SAFETY INSTRUCTIONS INSTALLATION	7
INSTRUCTIONS	7
BEFORE USING THE REFRIGERATOR	7
INSTALLATION OF THE REFRIGERATOR	8
ELECTRICAL CONNECTION EXTENSION	8
CABLE	8
REVERSING THE DOOR	9
REPLACING THE LIGHT	9
OPERATING THE REFRIGERATOR	10
SETTING THE TEMPERATURE CONTROL	10
CARE AND MAINTENANCE	10
CLEANING THE REFRIGERATOR	10
POWER FAILURE	10
HOLIDAYS	11
MOVING THE REFRIGERATOR	11
ENERGY SAVING TIPS	11
TROUBLESHOOTING GUIDE	12
WIRING DIAGRAMS	13
SPECIFICATIONS	15

REFRIGERATOR SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual for your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. This symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words "DANGER", "WARNING" or "CAUTION".



Danger means that failure to heed this safety statement may result in severe personal injury or death.



Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury or death.



Caution means that failure to heed this safety statement may result in minor or moderate personal injury, property or equipment damage.

All safety messages will explain the potential hazard, advise how to reduce the chance of injury and what can happen if the instructions are not followed.

IMPORTANT GUIDELINES



Before the refrigerator is used, it must be properly positioned and installed as described in this manual. To reduce the risk of fire, electrical shock or injury when using the refrigerator, follow basic precautions, including the following:


DANGER

- Plug into an earthed 3-prong outlet. Do not remove the earth prong, do not use an adapter and do not use an extension cable.
- It is recommended that a separate circuit, serving only the Refrigerator be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean Refrigerator parts with flammable fluids. These fumes can create a fire hazard or explosion.
- Do not store or use petrol or other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power cable of the unit is disconnected.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the Refrigerator or disconnect the power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your Refrigerator unless specifically recommended to do so in this manual. All other servicing should be referred to a qualified technician.

WARNING

- Use two or more people to move and install the appliance. Failure to do so can result in back or other injury.
- To ensure proper ventilation for the appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 100°F (38°C). This unit must be installed in an area protected from the elements such as wind, rain, water spray or drips.
- This appliance should not be located next to ovens, grills or other sources of high heat.
- The appliance must be installed with all electrical, water and drain connections in accordance with national and local regulations. A standard electrical supply (220~240 V AC only, 50 Hz), properly earthed in accordance with the National Electrical regulations is required.
- Do not kink or pinch the power supply cord of the appliance.
- The fuse (or circuit breaker) rating should be 13A.
- It is important for the appliance to be level in order to work properly. You may need to make several adjustments to level it.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the Refrigerator.
- Although the unit has been tested at the factory, due to transit and storage, clean the unit before first use.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage and/or discolour the interior.
- Only use this appliance for domestic purposes.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY YOUNG CHILDREN OR INFIRM PERSONS UNLESS THEY HAVE BEEN ADEQUATELY SUPERVISED BY A RESPONSIBLE PERSON TO ENSURE THAT THEY CAN USE THE APPLIANCE SAFELY. YOUNG CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

PARTS & FEATURES

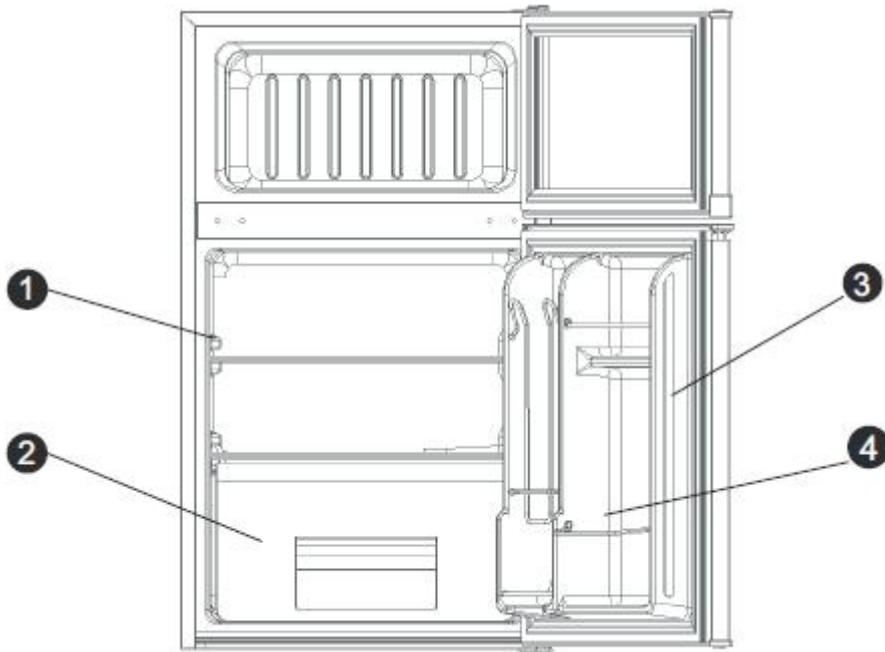

1. Removable Shelves
2. Crisper
3. Door Seal
4. Wire bottle rack

IMPORTANT SAFETY INSTRUCTIONS

 WARNING	To reduce the risk of fire, electrical shock or injury when using your Refrigerator, follow these basic precautions:
<ul style="list-style-type: none">• Read all instructions before using the appliance.• DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are potential problems. Discarded or abandoned appliances are still dangerous. Ensure that old appliances are out of reach.• Before you throw away your old appliance: remove the door. Leave the shelves in place so that children may not easily climb inside.• Never allow children to operate, play with or crawl inside the appliance.• Never clean the Refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.• Do not store or use petrol or any other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.• If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard. <p style="text-align: center;">- Save these instructions -</p>	

INSTALLATION INSTRUCTIONS

➤ Before Using the Refrigerator

- Remove the exterior and interior packing.
- Check to be sure you have all of the following parts:
 - 2 Shelves
 - Instruction Manual
 - 1 egg tray
 - 1 ice tray
 - 2 handles
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours if transported in an upright position. If the appliances has been transported laid down it will need to stand upright for a minimum of 4 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation and allow the compressor to settle.
- Clean the interior surface with lukewarm water using a soft cloth.

➤ Installation of the Refrigerator

- This appliance is designed to be free standing only and should not be recessed or built-in

(fully recessed).

- Place the appliance on a flat surface that is strong enough to support it when it is fully loaded. To level the appliance, adjust the levelling legs at the bottom of the unit.
- Allow 125mm of space between the back and sides of the unit which allows sufficient air circulation to cool the compressor.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the appliance into an exclusive, properly installed, earthed wall outlet. Do not, under any circumstances, cut or remove the third (earth) prong from the power cable. Any questions concerning power and/or earthing should be directed to a certified electrician.
- After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before placing items in the compartment.

➤ **Electrical Connection**

⚡ Warning ⚡

Improper use of the earthed plug can result in the risk of electrical shock. If the power cable is damaged, it must be replaced by a qualified electrician.

This unit should be properly earthed for safety reasons. To minimize the possibility of electrical shock, the power cable of this unit is equipped with a three-prong plug which fits a standard three prong wall outlet.

This unit requires a standard 220~240V AC ~/50Hz electrical outlet with three-prong earth. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly earthed. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly earthed 3-prong wall outlet. **Under no circumstances should this appliance be connected to a 2-prong outlet.**

To prevent accidental injury, the cable should be secured behind the unit and not left exposed or dangling.

The unit should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This ensures the best performance and prevents overloading of domestic circuits that could cause a fire hazard. Never unplug the unit by pulling the power cable. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cables that have become frayed or otherwise damaged. Do not use a cable that shows cracks or abrasion damage along its length or at either end. When moving the unit, be careful not to damage the power cable.


➤ **Extension Cable**

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cable with this unit. However, if you must use an extension cable, it is absolutely necessary that it be a 3-wire earthed type appliance extension cable with an earthed plug and outlet and that the electrical rating of the cable is 220~240V / 13A.

➤ **Install the handles**

This refrigerator has 2 handles that needs to be installed.

Please see the following installation instructions.

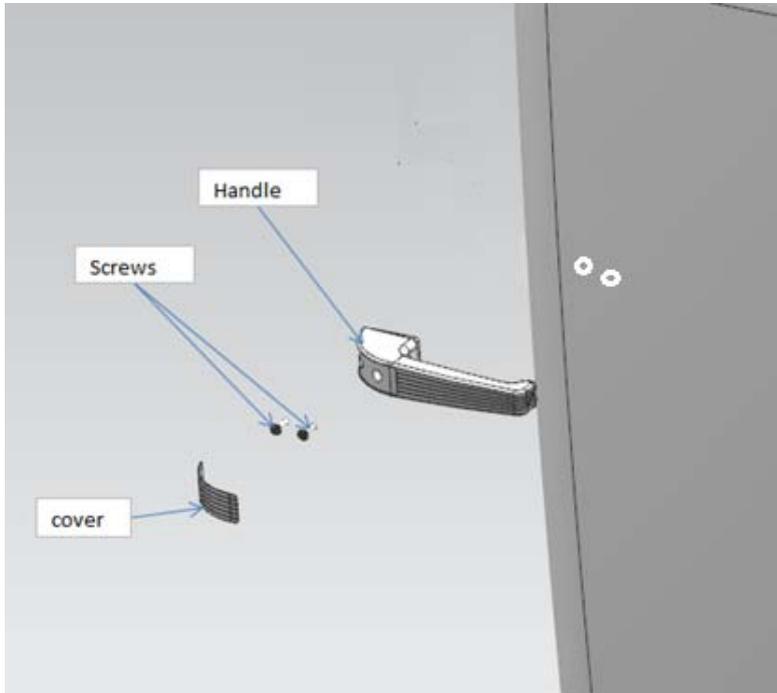


1. The handles and screws are placed in the accessory bag.
2. Place the handle on the door, use two screws to secure.
3. Clip the screw cover.

➤ **Replacing the light**

The models are fitted with an energy efficient long-life LED light. If the light needs to be replaced this must be done by a qualified engineer. Light spec is E14, 220-240V, 50Hz, 1W.

OPERATING THE REFRIGERATOR

➤ Setting the Temperature Control

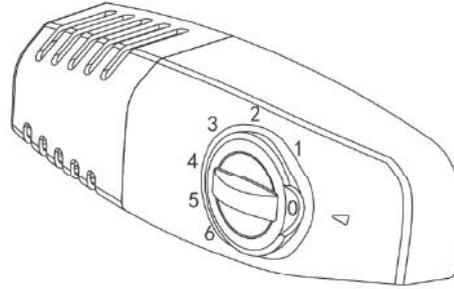

- The appliance has one control for regulating the temperature. The temperature control is located on the upper right hand of the fridge interior compartment.
- The first time you turn the unit on, adjust the temperature control knob to “6” and run for at least 2 hours before putting items inside. This will ensure the cabinet is thoroughly chilled.
- The range of the temperature control is from position 1 (the warmest) to 6 (the coldest). Adjust the temperature control to the setting that best suits your needs. Setting “4” should be appropriate for home or office use.
- Turning the temperature control knob to “0” position stops the cooling cycle but does not shut off the power to the unit.

NOTE:

- If the unit is unplugged or loses power, you must wait 3-5 minutes before restarting the it. If you attempt to restart before this time delay, the appliance will not operate.
- Large numbers of items will lower the cooling efficiency of the appliance.
- Do not place items on the air outlet and ensure to leave spaces for airflow.
- If you choose to change the thermostat setting, adjust thermostat control by one increment at a time. Allow several hours for the temperature to stabilize between adjustments.

CARE AND MAINTENANCE

➤ Cleaning the Refrigerator

- Unplug the appliance and remove all items including shelves and racks.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to 250ml of water.
- Wash the shelves and racks with a mild detergent solution.
- Rinse well and wipe dry with a clean soft cloth. The external surfaces of the appliance should be cleaned with a mild detergent and warm water.
- Wring excess water out of the sponge or cloth when cleaning the controls or any electrical parts.

➤ Power Failure

- Most power failures are corrected within a few hours and should not affect the temperature of the appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the appropriate steps to protect the contents of the cooler.

➤ **Holidays**

- **Short vacations:** Leave the refrigerator operating during holidays of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odour and mould growth, leave the door slightly open slightly, blocking it open if necessary.

➤ **Moving the Refrigerator**

- Remove all items.
- Securely tape down all loose items (shelves and racks) inside the appliance.
- Turn the adjustable feet up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also, protect outside of appliance with a blanket or similar material to prevent damage.

➤ **Energy Saving Tips**

- The appliance should be located in the coolest area of the room, away from heat producing appliances and out of direct sunlight.


EXPERIENCING PROBLEMS WITH THE REFRIGERATOR?

Try the suggestions below to see if you can solve the problem before calling the service agent.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Refrigerator does not operate.	Not plugged in. Tripped circuit breaker or a blown fuse. The unit temperature control is set to "OFF".
Refrigerator is not cold enough.	Check the temperature control setting. Summer time may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The appliance does not have the correct clearances.
Turns on and off frequently.	The room temperature is hotter than normal. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The appliance does not have the correct clearances.
Vibrations.	Ensure the appliance is level.
The Refrigerator seems to make too much noise.	The rattling noise may come from the flow of the refrigerant which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in the appliance. Contraction and expansion of the inside walls may cause popping and crackling noises. The Refrigerator is not level.
The door will not close properly.	The appliance is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

WIRING DIAGRAM

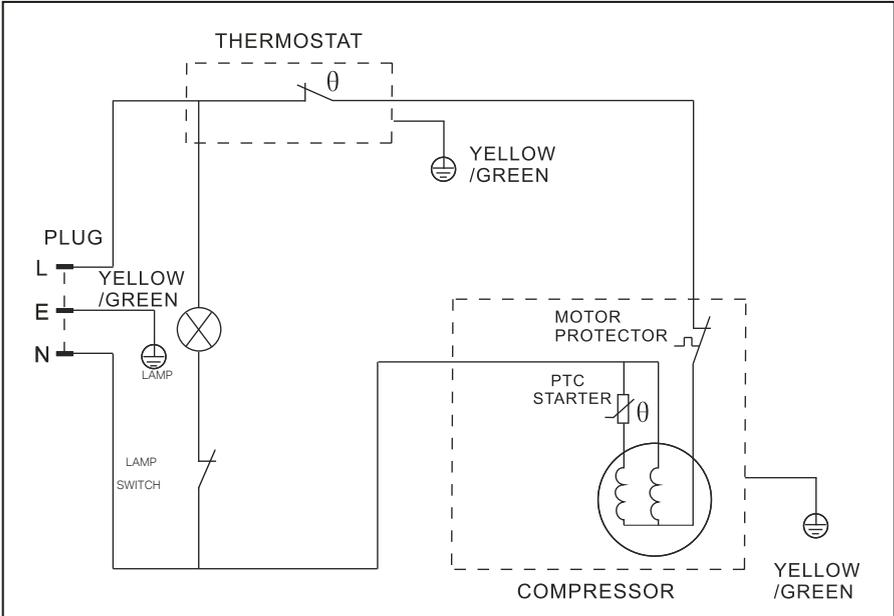

SPECIFICATIONS

GENERAL INFO	
Model No	MAB2035
Color	W/C/K/PB/R
Type of product	Free Standing
TECHNICAL DATA	
Total net volume (l)	88
Fridge net volume (l)	62
Freezer net volume (l)	26
No-frost system in fridge	No
No-frost system in freezer	No
Climate class	ST
Energy class	F
Energy consumption per year (kWh/year)	212
Noise level (dB)	39
Power supply voltage	220-240V
Frequency (Hz)	50
FRIDGE EQUIPMENT	
Color of internal equipment	neutral
Handle type	Retro Style
Interior lamp type	LED
Egg tray	Yes
FREEZER EQUIPMENT	
Star rating	3
Ice cube tray	Yes
FEATURES	
Temperature control	Mechanical
Adjustable thermostat	Yes
Thermostat setting range	0-6
Reversible doors	No
Adjustable feet (front / rear)	yes/no
Replaceable door gaskets	Yes
LOGISTIC DATA	
Net Dimension(mm)	845*479*495
Packed Dimension(mm)	875*515*550
Net weight (kg)	23
Gross weight (kg)	25

Here For You

After-sales assistance

If you continue to experience problems with your appliance, please call the Montpellier customer service helpline on: **01759 487839**

Please have all your product details available, including the model number, serial number, original sales invoice (clearly showing model number, date of purchase and your retailer's details) before registering a fault.

The service call cannot progress without this information.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions
- Any appliance that is used for anything other than domestic purposes.
Any defect caused by accident, misuse, unauthorised modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
Use of the appliance by anyone other than the Householder.
Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
Repair costs incurred that have not been authorised by Montpellier service and/or carried out by a non-approved Montpellier engineer.
- Montpellier Appliances do not accept claims for consequential loss, rusting, corroding, delivery damage or scratches.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at www.montpellier-appliances.com/support

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on:

01759 487839

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Montpellier Domestic Appliances Ltd.

Unit 1, Tewkesbury Retail Park, Northway Lane,
Tewkesbury, Gloucestershire GL20 8JU

www.montpellier-appliances.com



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.